


S U P R E M E
S K Y L I G H T S . I N C .
TECHNICAL BULLETIN: SOLAR MOTOR NOT CHARGING



Red Wire should be on top. To switch the wires you must first remove the cover to access the screw terminal. Then simply loosen both top screws to remove the solar panel wires. Reverse the wiring, tighten screws and replace the cover.